

# **PK\_Module\_AT\_User\_Guide\_V01.1.1**

---

## COPYRIGHT

© 2024, RealSil Semiconductor Corp. All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of RealSil Semiconductor Corp.

RealSil reserves the right to make corrections, enhancements, improvements and other changes to its products and services. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

Buyers and others who are developing systems that incorporate RealSil products (collectively, "Customers") understand and agree that Customers remain responsible for using their independent analysis, evaluation and judgment in designing their applications and that customers have full and exclusive responsibility to assure the safety of Customers' applications and compliance of their applications (and of all RealSil products used in or for Customers' applications) with all applicable regulations, laws and other applicable requirements. Designer represents that, with respect to their applications, Customer has all the necessary expertise to create and implement safeguards that, (1) anticipate dangerous consequences of failures, (2) monitor failures and their consequences, and (3) lessen the likelihood of failures that might cause harm and take appropriate actions. Customer agrees that prior to using or distributing any applications that include RealSil products, Customer will thoroughly test such applications and the functionality of such RealSil products as used in such applications.

RealSil's provision of technical, application or other design advice, quality characterization, reliability data or other services or information, including, but not limited to, reference designs and materials relating to evaluation kits, (collectively, "Resources") are intended to assist designers who are developing applications that incorporate RealSil products; by downloading, accessing or using RealSil's Resources in any way, Customer (individually or, if Customer is acting on behalf of a company, Customer's company) agrees to use any particular RealSil Resources solely for this purpose and subject to the terms of this Notice.

RealSil's provision of RealSil Resources does not expand or otherwise alter RealSil's applicable published warranties or warranty disclaimers for RealSil's products, and no additional obligations or liabilities arise from RealSil providing such RealSil Resources. RealSil reserves the right to make corrections, enhancements, improvements and other changes to its RealSil Resources. RealSil has not conducted any testing other than that specifically described in the published documentation for a particular RealSil Resource.

Customer is authorized to use, copy and modify any individual RealSil Resource only in connection with the development of applications that include the RealSil product(s) identified in such RealSil Resource. No other license, express or implied, by estoppel or otherwise to any other RealSil intellectual property right, and no license to any technology or intellectual property right of RealSil or any third party is granted herein, including but not limited to any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which RealSil products or services are used. Information regarding or referencing third-party products or services does not constitute a license to use such products or services, or a warranty or endorsement thereof. Use of RealSil Resources may require a license from a third party under the patents or other intellectual property of the third party, or a license from RealSil under the patents or other RealSil's intellectual property.

Realsil's Resources are provided "as is" and with all faults. Realsil disclaims all other warranties or representations, express or implied, regarding resources or use thereof, including but not limited to accuracy or completeness, title, any epidemic failure warranty and any implied warranties of merchantability, fitness for a particular purpose, and non-infringement of any third party intellectual property rights.

Realsil shall not be liable for and shall not defend or indemnify Customer against any claim, including but not limited to any infringement claim that related to or is based on any combination of products even if described in Realsil Resources or otherwise. In no event shall Realsil be liable for any actual, direct, special, collateral, indirect, punitive, incidental, consequential or exemplary damages in connection with or arising out of Realsil's Resources or use thereof, and regardless of whether Realsil has been advised of the possibility of such damages. Realsil is not responsible for any failure to meet such industry standard requirements.

## Contents

|      |   |    |
|------|---|----|
| 1    | Introduction.....   | 7  |
| 1.1  | <i>Abstract</i> .....   | 7  |
| 1.2  | <i>Command description</i> .....                              | 8  |
| 1.3  | <i>AT command list</i> .....                                  | 8  |
| 2    | Common Command.....   | 11 |
| 2.1  | <i>AT+TEST – Test AT command ready</i> .....                  | 11 |
| 2.2  | <i>AT+LIST – Print all AT command</i> .....                   | 11 |
| 2.3  | <i>AT+RST – Restart module</i> .....                          | 12 |
| 2.4  | <i>AT+GMR – Query version info</i> .....                      | 12 |
| 2.5  | <i>AT+ECHOLEVEL – Set UART echo mode and debug mode</i> ..... | 13 |
| 2.6  | <i>AT+RESTORE – Factory Reset</i> .....                       | 13 |
| 2.7  | <i>AT+UARTCFG – UART configuration</i> .....                  | 14 |
| 2.8  | <i>AT+OTA – OTA upgrade</i> .....                             | 15 |
| 2.9  | <i>AT+OTASET – Choose Activated Image</i> .....               | 15 |
| 2.10 | <i>AT+GPIO – GPIO control</i> .....                           | 15 |
| 3    | Wifi command.....   | 17 |
| 3.1  | <i>AT+WLCOMP – Connect to AP</i> .....                        | 17 |
| 3.2  | <i>AT+WLDISCONN - Disconnect from AP</i> .....                | 18 |
| 3.3  | <i>AT+WLSCAN - Scan AP</i> .....                              | 18 |
| 3.4  | <i>AT+WLRSSI – Query the RSSI value</i> .....                 | 18 |
| 3.5  | <i>AT+WLSOFTAP - Set AP mode</i> .....                        | 19 |
| 3.6  | <i>AT+WLSTATE - Wifi information</i> .....                    | 20 |
| 3.7  | <i>AT+WLSTATICIP - Set static IP for STA</i> .....            | 20 |
| 3.8  | <i>AT+WLAUTOCONN - Set Auto connect</i> .....                 | 21 |
| 3.9  | <i>AT+WLMAC - Set MAC address</i> .....                       | 21 |
| 4    | TCP/IP command.....   | 23 |
| 4.1  | <i>AT+SKTGETERR – Get LWIP errno</i> .....                    | 23 |
| 4.2  | <i>AT+SKTSERVER – Create TCP/UDP/SSL Server</i> .....         | 23 |
| 4.3  | <i>AT+SKTCLIENT – Create TCP/UDP/SSL Client</i> .....         | 24 |

|      |  |    |
|------|--|----|
| 4.4  | <i>AT+SKTDEL – Close TCP/UDP/SSL connection .....</i>                | 26 |
| 4.5  | <i>AT+SKTSEND – Send data.....</i>                                   | 27 |
| 4.6  | <i>AT+SKTREAD – Receive data.....</i>                                | 29 |
| 4.7  | <i>AT+SKTRECVCFG – Set auto receive data mode .....</i>              | 30 |
| 4.8  | <i>AT+SKTSTATE – Check network connection status .....</i>           | 30 |
| 4.9  | <i>AT+PING – PING Command .....</i>                                  | 31 |
| 4.10 | <i>AT+SKTTT – Set transparent transmission mode .....</i>            | 32 |
| 4.11 | <i>AT+SKTAUTOLINK – Save translink and enable autolink.....</i>      | 33 |
| 4.12 | <i>AT+HTTPCLIENT – Send http/https client request.....</i>           | 34 |
| 4.13 | <i>AT+SSLCRET – Read or set CA cert/pk key.....</i>                  | 35 |
| 5    | <b>MQTT command .....</b>  | 36 |
| 5.1  | <i>AT+MQTTOPEN – Create (open) a new mqtt connection.....</i>        | 36 |
| 5.2  | <i>AT+MQTTCLOSE – Delete (close) a connection.....</i>               | 37 |
| 5.3  | <i>AT+MQTTCONN – Connect to the mqtt server .....</i>                | 37 |
| 5.4  | <i>AT+MQTTDISCONN – Disconnect from the mqtt server .....</i>        | 39 |
| 5.5  | <i>AT+MQTTSUB – Subscribe topic.....</i>                             | 39 |
| 5.6  | <i>AT+MQTTUNSUB – Unsubscribe topic.....</i>                         | 40 |
| 5.7  | <i>AT+MQTTPUB – Publish message .....</i>                            | 41 |
| 5.8  | <i>AT+MQTTCFG – Configure or inquire the parameters .....</i>        | 43 |
| 5.9  | <i>AT+MQTTRESET – Reset all connections .....</i>                    | 44 |
| 6    | <b>BlueTooth command .....</b>                                       | 46 |
| 6.1  | <i>AT+BLEPMODE – Set the BT peripheral mode .....</i>                | 46 |
| 6.2  | <i>AT+BLECMODE – Set the BT central mode.....</i>                    | 46 |
| 6.3  | <i>AT+BLEMAC – Set or get BT MAC address .....</i>                   | 46 |
| 6.4  | <i>AT+BLEMTU – Set or get BT GATT MTU size.....</i>                  | 47 |
| 6.5  | <i>AT+BLEPAIR – Configure authentication information .....</i>       | 47 |
| 6.6  | <i>AT+BLEPASSKEY – Setup or inquire the pairing code .....</i>       | 48 |
| 6.7  | <i>AT+BLEUSERCONF – Send user confirmation.....</i>                  | 48 |
| 6.8  | <i>AT+BLECONNPARAM – Update connection parameters.....</i>           | 49 |
| 6.9  | <i>AT+BLECLRINQ – Clear or inquire the pairing information .....</i> | 49 |

|      |   |    |
|------|---|----|
| 6.10 | <i>AT+BLENANE – Set or inquire the adv name .....</i>                     | 50 |
| 6.11 | <i>AT+BLEADV – Set or inquire the adv status.....</i>                     | 50 |
| 6.12 | <i>AT+BLEADVINTV – Set or inquire the adv interval.....</i>               | 51 |
| 6.13 | <i>AT+BLEINDNTF – Send indication/notification from GATT server .....</i> | 51 |
| 6.14 | <i>AT+BLECONN – Create connection.....</i>                                | 52 |
| 6.15 | <i>AT+BLEDISCONN – Close connection.....</i>                              | 52 |
| 6.16 | <i>AT+BLECONNINFO – Get all connection information.....</i>               | 53 |
| 6.17 | <i>AT+BLESCAN – Scan BLE adv.....</i>                                     | 53 |
| 6.18 | <i>AT+BLEREAD – Read characteristic value .....</i>                       | 53 |
| 6.19 | <i>AT+BLEWRITE – Write characteristic value.....</i>                      | 54 |
| 6.20 | <i>AT+BLEWHITELIST – Modify whitelist .....</i>                           | 55 |
| 6.21 | <i>AT+BLESCANPARAM – Modify scan interval/window.....</i>                 | 55 |
| 6.22 | <i>AT+BLEAUTOCOMPLETE – BLE auto reconnect.....</i>                       | 56 |
| 6.23 | <i>AT+BLEIBEAON – Start or stop ibeacon.....</i>                          | 56 |
| 6.24 | <i>AT+BLEIBCNDATA – Set or get ibeacon adv data .....</i>                 | 57 |
| 6.25 | <i>AT+BLEIBCNUUID – Set or get ibeacon uuid .....</i>                     | 57 |
| 7    | Release History .....   | 58 |

# 1 Introduction

## 1.1 Abstract

This article describes the AT commands supported in PK module, and the format of each AT command.

- (1) Users can connect the device to networks, cloud services, and implement IoT services, with these AT commands.
- (2) Users can use the device to do some TCP/IP service as a server or client.
- (3) Users can control the device as a Bluetooth central or Bluetooth peripheral, with these AT commands.
- (4) Users can use the common commands to check version, reset device, set GPIO, restore parameters back to outing-factory, etc.

Users can deal the connections as [Figure 1.1](#), in order to test the AT commands.

The module can be powered by PC with USB cable.

The AT commands are inputted and outputted with UART\_RX, UART\_TX by USB2TTL converter. The baud rate of this cable is set to 38400 as default, the data bits = 8, parity = none, encoding = ASCII.

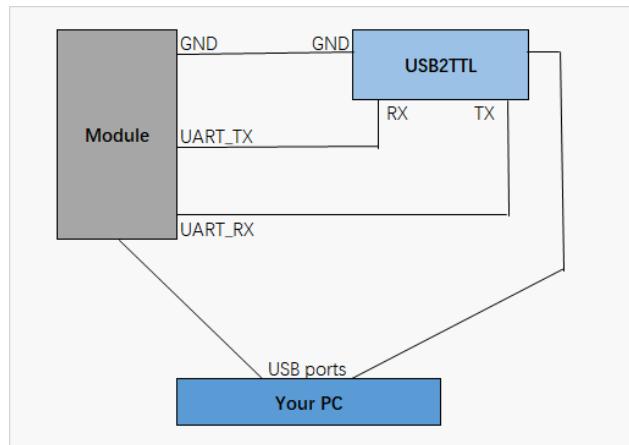


Figure 1.1 Abstract of connection

In order to deal these connections, the user need to make some preparations, as [table 1.1](#).

| Hardware                       | Illustration                                |
|--------------------------------|---|
| Module                         | Device.                                     |
| PC                             | To input AT commands, and check response.   |
| USB cable (x 2)                | To connect device to PC.                    |
| Some dupont lines (at least 3) | To connect the device to USB2TTL converter. |

|                   |   |
|-------------------|---|
| USB2TTL converter | To connect the UART port to USB port of PC. |
|-------------------|---|

Table 1.1 Required hardware

## 1.2 Command description

1. Comma (,), quotation marks (" "), square brackets ([ ]) and backslash (\) are used as delimiter in this version AT command, so if they are needed, use escape character "\". For example, if need to input "[", it should be "\[" instead.
2. Every normal command should end with "\n", except data command.
3. Each AT command is started with "AT", and all the pending letters of command (excluding parameters) are all in uppercase.

## 1.3 AT command list

| Description               | AT Command   |
|---------------------------|--------------|
| <b>Common command</b>     |              |
| Test AT command ready     | AT+TEST      |
| Print all AT command      | AT+LIST      |
| Restart module            | AT+RST       |
| Query version info        | AT+GMR       |
| Set AT commands echo mode | AT+ECHOLEVEL |
| Factory Reset             | AT+RESTORE   |
| UART configuration        | AT+UARTCFG   |
| OTA upgrade               | AT+OTA       |
| Choose activated image    | AT+OTASET    |
| GPIO control              | AT+GPIO      |
| <b>Wifi command</b>       |              |

|                                    |                |
|------------------------------------|----------------|
| Connect to AP (STA mode)           | AT+WLCONN      |
| Disconnect from AP                 | AT+WLDISCONN   |
| Scan AP                            | AT+WLSCAN      |
| Query the RSSI value               | AT+WLRSSI      |
| Set AP mode                        | AT+WLSOFTAP    |
| Wifi information                   | AT+WLSTATE     |
| Set static IP for STA              | AT+WLSTATICIP  |
| Set Auto connect                   | AT+WLAUTOCONN  |
| Set MAC address                    | AT+WLMAC       |
| <b>TCP/IP command</b>              |                |
| Get errno                          | AT+SKTGETERR   |
| TCP/UDP/SSL Server                 | AT+SKTSERVER   |
| TCP/UDP/SSL Client                 | AT+SKTCLIENT   |
| Close TCP/UDP/SSL connection       | AT+SKTDEL      |
| Send packet                        | AT+SKTSEND     |
| Receive packet                     | AT+SKTREAD     |
| Enable auto receive data mode      | AT+SKTRECVCFG  |
| Check network connection status    | AT+SKTSTATE    |
| Ping                               | AT+PING        |
| Set transparent transmission mode  | AT+SKTTT       |
| Save translink and enable autolink | AT+SKTAUTOLINK |
| Send http/https client request     | AT+HTTPCLIENT  |
| Read or set CA cert/pk key         | AT+SSLCRET     |
| <b>MQTT Command</b>                |                |

|   |                 |
|---|-----------------|
| Open a new mqtt connection                      | AT+MQTTOPEN     |
| Close a mqtt connection                         | AT+MQTTCLOSE    |
| Connect to mqtt server                          | AT+MQTTCONN     |
| Disconnect from mqtt server                     | AT+MQTTDISCONN  |
| Subscribe a mqtt topic                          | AT+MQTTSUB      |
| Unsubscribe a mqtt topic                        | AT+MQTTUNSUB    |
| Publish mqtt messages                           | AT+MQTTPUB      |
| Configure or inquire mqtt parameters            | AT+MQTTCFG      |
| Reset all mqtt connections                      | AT+MQTTRESET    |
| <b>Bluetooth Command</b>                        |                 |
| Set the BT peripheral mode                      | AT+BLEPMODE     |
| Set the BT central mode                         | AT+BLECMODE     |
| Set or get the BT MAC address                   | AT+BLEMAC       |
| Set or get the BT GAT mtu size                  | AT+BLEMTU       |
| Configure authentication information            | AT+BLEPAIR      |
| Setup or inquire the pairing code               | AT+BLEPASSKEY   |
| Send user confirmation                          | AT+BLEUSERCONF  |
| Update connection parameters                    | AT+BLECONNPARAM |
| Clear or inquire the pairing information        | AT+BLECLRINQ    |
| Set or inquire the adv name                     | AT+BLENANE      |
| Set or inquire the adv status                   | AT+BLEADV       |
| Set or inquire the adv interval                 | AT+BLEADVINTV   |
| Send indication/notification from peripheral BT | AT+BLEINDNTF    |
| Create connection                               | AT+BLECONN      |

|                                |                 |
|--------------------------------|-----------------|
| Close connection               | AT+BLEDISCONN   |
| Get all connection information | AT+BLECONNINFO  |
| Scan BLE adv                   | AT+BLESCAN      |
| Read characteristic value      | AT+BLEREAD      |
| Write characteristic value     | AT+BLEWRITE     |
| Modify whitelist               | AT+BLEWHITELIST |
| Modify scan interval/window    | AT+BLESCANPARAM |
| BLE auto reconnect             | AT+BLEAUTOCONN  |
| Start or stop ibeacon          | AT+BLEIBEAON    |
| Set or get ibeacon adv data    | AT+BLEIBCNDATA  |
| Set or get ibeacon uuid        | AT+BLEIBCNUUID  |

## 2 Common Command

### 2.1 AT+TEST – Test AT command ready

| AT+TEST     |  |
|-------------|--|
| Description | This command is used to test system boot successfully, and user can execute AT commands. |
| Response    | +TEST:OK   |

### 2.2 AT+LIST – Print all AT command

| AT+LIST     |   |
|-------------|---|
| Description | This command is used to output all supported AT commands right now. |

|          |  |
|----------|--|
|          | <p>Common AT Command:<br/>AT+TEST<br/><i>// ... ... followed by other common command list.</i></p> <p>Wi-Fi AT Command:<br/>AT+WLSOFTAP<br/><i>// ... ... followed by other wifi command list.</i></p> <p>TCP/IP AT Command:<br/>AT+SKTGETERR<br/><i>// ... ... followed by other tcp/ip command list.</i></p> <p>BT AT command:<br/>AT+BLECMODE<br/><i>// ... ... followed by other BT command list.</i></p> <p>MQTT AT command:<br/>AT+MQTTOPEN<br/><i>// ... ... followed by other mqtt command list.</i></p> <p>+LIST:OK</p> |
| Response |  |

## 2.3 AT+RST – Restart module

| <b>AT+RST</b> |  |
|---------------|--|
| Description   | This command is used to restart the module                     |
| Response      | +RST:OK<br><i>// Then the system should restart right now.</i> |

## 2.4 AT+GMR – Query version info

| <b>AT+GMR</b> |  |
|---------------|--|
| Description   | This command is used to query module AT version as well as SDK version |
| Response      | +GMR:<at-version>,<sdk-version>(<compile_time>)                        |

## 2.5 AT+ECHOLEVEL – Set UART echo mode and debug mode

| AT+ECHOLEVEL=<echo>[,< debug mask >,< debug level >] |  |  |
|--|--|--|
| Description  | This command is used to enable/disable UART echo and set debug mask and level                    |  |
| Response   | +ECHOLEVEL:OK<br>+ECHOLEVEL:ERROR:<error_no>   |  |
| Parameter  | <echo>   | 0 : disable echo<br>1 : enable echo (default)                                    |
|  | [<debug mask>]   | BIT 6: OS (default on)<br>BIT 7: LWIP (default on)<br>BIT 8: COMMON (default on) |
|  | [<debug level>]  | 0: OFF<br>1: ALWAYS<br>2: ERROR (default)<br>3: WARNING<br>4: INFO               |
| Error Number   | 1: There should be parameters.<br>2: parameter number error<br>3: echo should be ‘0’ or ‘1’ only |  |
| Example  | <i>// Disable echo and debug message</i><br>AT+ECHOLEVEL=0,0x0,0x0                               |  |

## 2.6 AT+RESTORE – Factory Reset

| AT+RESTORE   |  |
|--------------|--|
| Description  | This command is used to clean flash data, module will restore to factory setting |
| Response     | +RESTORE:OK<br>+RESTORE:ERROR:<error_no>   |
| Error Number | 1: restore default data fail<br>2: restore default image fail                    |

|      |   |
|------|---|
| NOTE | AT+RESTORE<br>+RESTORE:OK<br><i>// System will reboot</i> |
|------|---|

## 2.7 AT+UARTCFG – UART configuration

| AT+UARTCFG<br>=<baudrate>,<databits>,<stopbits>,<parity>,<flowcontrol>,<configmode> |   |  |
|---|---|--|
| Description   | This command is used to setup uart mode               |  |
| Response  | +UARTCFG:OK<br>+UARTCFG:ERROR:<error_code>            |  |
| Parameter   | <baudrate>  | 2400, 4800, 9600, 19200, 38400(default),<br>57600, 115200, 921600, 1152000   |
|   | <databits>  | 5: 5 bit data<br>6: 6 bit data<br>7: 7 bit data<br>8: 8 bit data (default)   |
|   | <stopbits>  | 1: 1 bit stop (default)<br>2: 2 bit stop   |
|   | <parity>  | 0: None parity (default)<br>1: Odd parity<br>2: Even parity  |
|   | <flowcontrol>   | 0: disable flowcontrol (default)<br>1: enable RTS and CTS  |
|   | <configmode>  | 0: set the current configuration and will not save to flash<br>1: save configuration to flash and take effect immediately<br>2: save configuration to flash and take effect after reboot |
| Error number  | 1: command format error<br>2: command parameter error |  |

## 2.8 AT+OTA – OTA upgrade

| AT+OTA=<ip>,<port> |  |                             |
|--------------------|--|-----------------------------|
| Description        | This command is used to upgrade firmware   |                             |
| Response           | +OTA:OK<br>+OTA:ERROR:<error_code>   |                             |
| Parameter          | <ip>   | Download server ip address  |
|                    | <port>   | Download server port number |
| Error number       | 1: command format error<br>2: command parameter error<br>3: can not connect to this ip:port.             |                             |
| NOTE               | 1: download server should run first.<br>2: module should connect to the same network as download server. |                             |

## 2.9 AT+OTASET – Choose Activated Image

| AT+OTASET=<image ID> |   |  |
|----------------------|---|--|
| Description          | This command is used to choose the activated image    |  |
| Response             | +OTASET:OK<br>+OTASET:ERROR:<error_code>              |  |
| Parameter            | <image ID>  | 0: default image<br>1: OTA upgrade image |
|                      |   |  |
| Error number         | 1: command format error<br>2: command parameter error |  |
| NOTE                 | System will reboot                                    |  |

## 2.10 AT+GPIO – GPIO control

| AT+GPIO=<R/W>,<PORT>[,<DATA>,<DIR>,<PULL>] |  |
|--|--|
| Description                                | This command is used to control gpio pin |

|              |   |  |
|--------------|---|--|
| Response     | +GPIO:OK:<val> //val is the value read from gpio or write to gpio<br>+GPIO:ERROR:<error_code> |  |
| Parameter    | <R/W>   | “R”: read gpio<br>“W”: write gpio  |
|              | <PORT>  | Px_x, ex: PC_4   |
|              | [<DATA>]  | 0 or 1 when write gpio   |
|              | [<DIR>]   | Pin direction:<br>0: PIN_INPUT<br>1: PIN_OUTPUT                                  |
|              | [<PULL>]  | Pin mode:<br>0: PullNone/PullDefault<br>1: PullUp<br>2: PullDown<br>3: OpenDrain |
| Error number | 1: command format error<br>2: command parameter error<br>3: invalid pin name                  |  |

## 3 Wifi command

### 3.1 AT+WLCONN – Connect to AP

| AT+WLCONN=<ssid>,<pwd>[,<key_id>,<bssid>] |  |   |
|---|--|---|
| Description                               | This command is used to connect to AP for station  |   |
| Response                                  | +WLCONN:OK<br>+WLCONN:ERROR:<error_code>   |   |
| Parameter                                 | <ssid>   | This parameter can't be empty<br>Format: "ssid"<br>Must add prefix '\\' for special character(' ','\' , '\"', '[', ']') |
|   | <pwd>  | 1. WPA/WPA2 : length is 8~64<br>2. WEP : length is 5 or 13  |
|   | [<key_id>]   | For WEP security, must be 0~3. If not set, it will use id 0 as default  |
|   | [<bssid>]  | Format : 6 bytes hex number<br>e.g. 112233445566  |
|   | [<async>]  | 0 : synchronized network connection (default)<br>1 : non-synchronized network connection                                |
| Error number                              | 1: command format error<br>2: command parameter error<br>3: wifi initial error<br>4: connect to AP failed<br>5: wifi mode error<br>6: get ap security type failed<br>7: dhcp timeout, use static ip 192.168.1.80 |   |
| NOTE                                      | <i>// If no password, set the parameter &lt;pwd&gt; NULL</i><br>AT+WLCONN="SSID"<br>AT+WLCONN="SSID",,,112233445566<br><i>// If need non-synchronized network connection</i><br>AT+WLCONN="SSID","PWD",,,1       |   |

## 3.2 AT+WLDISCONN - Disconnect from AP

| AT+WLDISCONN |   |
|--------------|---|
| Description  | This command is used to disconnect with AP for station        |
| Response     | +WLDISCONN:OK<br>+WLDISCONN:ERROR:<error_code>                |
| Error number | 1,2: reserved<br>3: operation failed<br>4: disconnect timeout |

## 3.3 AT+WLSCAN - Scan AP

| AT+WLSCAN    |   |
|--------------|---|
| Description  | This command is used to scan AP in the air  |
| Response     | AP : <num>,<ssid>,<chl>,<sec>,<rssi>,<bssid><br>+WLSCAN:OK<br>+WLSCAN:ERROR:<error_no>  |
| Error number | 1: Input wrong parameters.<br>2, 3: Memory failure.<br>4: Failed when setting scan channel.<br>5: Failed when calling scan app. |
| NOTE         | The information of AP in order are number, SSID, channel, security mode, strength of signal, BSSID                              |

## 3.4 AT+WLRSSI – Query the RSSI value

| AT+WLRSSI   |  |
|-------------|--|
| Description | This command is used to read the RSSI value of connected wifi. |
| Response    | RSSI = <read_val><br>+WLRSSI:OK                                |

|              |   |
|--------------|---|
| Error number | NULL  |
| Example      | <pre>// Connect to an AP. AT+WLCONN=test,12345678 +WLCOMP:OK // Read the RSSI AT+WLRSSI RSSI = -66 +WLRSSI:OK // Disconnect. AT+WLDISCONN +WLDISCONN:OK // Read the RSSI again. It should be 0 now. AT+WLRSSI RSSI = 0 +WLRSSI:OK</pre> |

### 3.5 AT+WLSOFTAP - Set AP mode

| AT+WLSOFTAP=<ssid>,<pwd>,<chl>,<hidden>[,<max_conn>] |  |  |
|--|--|--|
| Description  | This command is used to config AP mode     |  |
| Response   | +WLSOFTAP:OK<br>+WLSOFTAP:ERROR:<error_no> |  |
| Parameter  | <ssid>                                     | This parameter can't be empty<br>Format: "ssid"<br>Must add prefix '\\' for special character(' ','\'','"',[',']') |
|  | <pwd>                                      | WPA/WPA2 : length is 8~64  |
|  | <chl>                                      | Channel : 1~11   |
|  | <hidden>                                   | 0 : Not hidden SSID<br>1 : hidden SSID   |
|  | [<max_conn>]                               | Max number of STAs, should be [1,3], default is 3  |

|              |  |
|--------------|--|
| Error number | 1: command format error<br>2: command parameter error<br>3: wifi initial error<br>4: start AP failed<br>5: wifi mode error |
| NOTE         | // If no password, remain the parameter NULL.<br>AT+WLSOFTAP="SSID",,11,0  |

### 3.6 AT+WLSTATE - Wifi information

| AT+WLSTATE  |  |
|-------------|--|
| Description | This command is used to list wifi information  |
| Response    | <mode>,<SSID>,<chl>,<sec>[,<key_id>],<pwd>,<mac>,<ip>,<gw><br>CLIENT : <num>,<mac><br>+WLSTATE:OK  |
| NOTE        | The information in order are wifi mode, SSID, channel, security mode, (key id for WEP), password, device mac, device IP, gateway.<br>In AP mode, show extra client information, number and the BSSID of client |

### 3.7 AT+WLSTATICIP - Set static IP for STA

| AT+WLSTATICIP=<ip>[,<gateway>,<mask>] |   |                                     |
|---------------------------------------|---|-------------------------------------|
| Description                           | This command is used to set static IP for station |                                     |
| Response                              | +WLSTATICIP:OK<br>+WLSTATICIP:ERROR:<error_no>    |                                     |
| Parameter                             | <ip>  | Static station IP, e.g. 192.168.1.2 |
|                                       | [<gateway>]                                       | [optional] set gateway IP           |
|                                       | [<mask>]  | [optional] set mask IP              |

|              |   |
|--------------|---|
| Error number | 1: command format error<br>2: command parameter error   |
| Example      | // Set static IP for station to 192.168.1.150<br>AT+WLSTATICIP:=192.168.1.150<br>// Connect to iot_newifi<br>AT+WLCNN=iot_newifi,abcdef1234<br>// query wifi information<br>AT+WLSTATE<br>STA,iot_newifi,11,AES,abcdef1234,ec:f0:0e:4e:75:0b,192.168.99.150,192.168.99.1<br>+WLSTATE:OK |
| NOTE         | Default static IP of station is 192.168.1.80  |

## 3.8 AT+WLAUTOCONN - Set Auto connect

| AT+WLAUTOCONN=<enable> |  |   |
|------------------------|--|---|
| Description            | This command is used to set the auto connection when device booting.<br>Default disable.   |   |
| Response               | +WLAUTOCONN:OK<br>+WLAUTOCONN:ERROR:<error_no>   |   |
| Parameter              | <enable>   | 0 : disable auto connect<br>1 : enable auto connect |
| Error number           | 1: command format error<br>2: command parameter error  |   |
| Example                | // connect to "iot_newifi", device will store this information into flash<br>AT+WLCNN=iot_newifi,abcdef1234<br>// enable auto connect, this will be store in flash<br>AT+WLAUTOCONN=1<br>>> reboot device<br>>> device will read connection information from flash and auto connect<br>to "iot_newifi" |   |

## 3.9 AT+WLMAC - Set MAC address

AT+WLMAC=<mac>

|              |   |  |
|--------------|---|--|
| Description  | This command is used to set the mac address of device   |  |
| Response     | +WLMAC:OK<br>+WLMAC:ERROR:<error_no>  |  |
| Parameter    | <mac>   | Format : 6 bytes hex number<br>e.g. 00e04cb72300 |
| Error number | 1: command format error<br>2: command parameter error   |  |
| NOTE         | Must restart system for effecting new MAC.<br>Do not modify this MAC value frequently unless necessary. |  |

## 4 TCP/IP command

### 4.1 AT+SKTGETERR – Get LWIP errno

| AT+SKTGETERR |   |
|--------------|---|
| Description  | This command is used to get errno in LwIP                                 |
| Response     | +SKTGETERR:OK:<errno><br>// errno isn't enabled in FW<br>+SKTGETERR:ERROR |

### 4.2 AT+SKTSERVER – Create TCP/UDP/SSL Server

| AT+SKTSERVER =<mode>,<Local Port> |  |  |        |  |              |         |
|-----------------------------------|--|--|--------|--|--------------|---------|
| Description                       | This command is used to create TCP/UDP/SSL Server.   |  |        |  |              |         |
| Response                          | +SKTSERVER:OK<br>// (x=[1,9], con_id 0 is reserved)<br>+SKTSERVER:con_id=x<br><br>// Under TCP mode, if a client connects, there will be response as below:<br>+SKTSERVER:A client connected to server[<server_id>]<br>con_id:<x>,seed,tcp,address:xxx.xxx.xxx.xxx,port:<x>,socket:<x><br>(response format refer to section 4.8 ATPI)<br><br>+SKTSERVER:ERROR:<error_no> |  |        |  |              |         |
| Parameter                         | <table> <tr> <td>&lt;Mode&gt;</td> <td>0 : TCP mode<br/>1 : UDP mode<br/>2 : SSL mode</td> </tr> <tr> <td>&lt;Local Port&gt;</td> <td>1~65535</td> </tr> </table>  |  | <Mode> | 0 : TCP mode<br>1 : UDP mode<br>2 : SSL mode | <Local Port> | 1~65535 |
| <Mode>                            | 0 : TCP mode<br>1 : UDP mode<br>2 : SSL mode   |  |        |  |              |         |
| <Local Port>                      | 1~65535  |  |        |  |              |         |
| Error Number                      | 1: parameter number error<br>2: local port should be 1~65535<br>3: create con_id error<br>4: create server task error<br>5: create socket error<br>6: set socket option error<br>7: bind error<br>8: listen error  |  |        |  |              |         |

|         |  |
|---------|--|
|         | 9: tcp server already exists error<br>10: accept error<br>11: create con_id for seed error<br>12: udp server already exists error<br>13: server can't start under TT(transparent transmission) mode<br>14: connection type is unknown (SSL isn't supported)<br>15: listening socket on bind_ip:port failed for ssl server<br>16: malloc failed for server certificate<br>17: malloc failed for server key<br>18: x509_crt_parse failed for server certificate<br>19: x509_crt_parse failed for server ca list<br>20: pk_parse_key failed for server key<br>21: hang node failed for ssl server<br>22: accept error for ssl server<br>23: malloc failed for ssl seed<br>24: initialization failed for ssl context<br>25: ssl_set_own_cert error<br>26: ssl handshake failed for ssl seed<br>27: create node failed for ssl seed |
| Example | <pre>// create a TCP server on PORT 5001 AT+SKTSERVER=0,5001 +SKTSERVER:OK +SKTSERVER:con_id=1 // when a client connects to TCP server[con_id=1] +SKTSERVER:A client connected to server[1] con_id:2,seed,tcp,address:192.168.99.185,port:64068,socket:1  // create a UDP server on PORT 5002 AT+SKTSERVER=1,5002 +SKTSERVER:OK +SKTSERVER:con_id=3  // query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 +SKTSTATE:OK</pre>   |
| NOTE    | This command will assign a con_id to this TCP/UDP/SSL Server.  |

## 4.3 AT+SKTCLIENT – Create TCP/UDP/SSL Client

**AT+SKTCLIENT =<mode>,< Remote Addr>,< Remote Port>[,<Local Port>,<Auth Mode>,<SNI>]**

|              |  |  |
|--------------|--|--|
| Description  | This command is used to create TCP/UDP/SSL Client.   |  |
| Response     | +SKTCLIENT:OK<br>// (x=[1,9], con_id 0 is reserved)<br>+SKTCLIENT:con_id=x<br>+SKTCLIENT:ERROR:<error_no>  |  |
| Parameter    | <Mode>   | 0 : TCP mode<br>1 : UDP mode<br>2 : SSL mode |
|              | <Remote Addr>  | xxx.xxx.xxx.xxx<br>Or<br>“www.xxx.com”       |
|              | < Remote Port>   | 1~65535                                      |
|              | [<Local Port>]   | Local port to bind, only valid for UDP       |
|              | [<Auth Mode>]  | Option for SSL connection.<br>Default: 0     |
|              | [<SNI>]  | Option for SNI feature.                      |
| Error Number | 1: parameter number error<br>2: remote IP format or host unfound error<br>3: remote port should be 1~65535 error<br>4: create con_id error (none available)<br>5: create client task error<br>6: inet_ntoa_r remote address error<br>7: create socket error<br>8: hang node error for tcp client<br>9: connect error for tcp client<br>10: hang node error for udp client<br>11: local port should be 1~65535<br>12: bind local port error<br>13: connection already exists for TT(transparent transmission) mode<br>14: set broadcast on socket failed<br>15: set multicast add membership on socket failed<br>16: set multicast interface failed<br>17: connection type is unknown (SSL isn't supported)<br>18: Initiate a TCP connection with host:port failed for ssl client<br>19: memory allocation failed for ssl context structure<br>20: ssl context initialization failed<br>21: ssl handshake failed<br>22: hang node failed for ssl client |  |

|         |   |
|---------|---|
|         | <pre> 23: mbedtls_ssl_conf_max_frag_len fail 24: ssl cert setup failed 25: sni setup failed 26: ssl auth mode invalid </pre>  |
| Example | <pre> //Create a TCP client and connect to TCP server IP 192.168.99.185 on server's port 5001 AT+SKTCLIENT=0,192.168.99.101,5001 +SKTCLIENT:OK +SKTCLIENT:con_id=4  // Create a UDP client targeting to server "www.google.com" on server's port 8080 AT+SKTCLIENT=1,"www.google.com",8080 +SKTCLIENT:OK +SKTCLIENT:con_id=5  // query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 con_id:5,client,udp,address:64.233.189.104,port:8080,socket:4 +SKTSTATE:OK  // Test SNI AT+SKTCLIENT=2,www.google.com,443,,2,www.google.com </pre> |
| NOTE    | This command will assign a con_id to this TCP/UDP/SSL Client.   |

## 4.4 AT+SKTDEL – Close TCP/UDP/SSL connection

| AT+SKTDEL=<con_id> |  |  |
|--------------------|--|--|
| Description        | This command is used to close TCP/UDP/SSL connection                           |  |
| Response           | +SKTDEL:OK<br>+SKTDEL:ERROR:<error_no>   |  |
| Parameter          | <con_id>   | con_id=[1,9] for certain connection<br>con_id=0 to close all connections |
| Error Number       | 1: command format error<br>2: command parameter error<br>3: no con_id is found |  |

|      |  |
|------|--|
|      | <pre>// query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 con_id:5,client,udp,address:64.233.189.104,port:8080,socket:4 +SKTSTATE:OK</pre><br><pre>// close con_id 5 (udp client) AT+SKTDEL=5 +SKTDEL:OK</pre><br><pre>// query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 +SKTSTATE:OK</pre><br><pre>// close con_id 1 (TCP server), and its seed(con_id=2) will be also closed AT+SKTDEL=1 +SKTDEL:OK</pre><br><pre>// query connection information AT+SKTSTATE con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 +SKTSTATE:OK</pre><br><pre>// close all connections AT+SKTDEL=0 +SKTDEL:OK</pre><br><pre>// query connection information # AT+SKTSTATE +SKTSTATE:OK</pre> |
| NOTE | Use the AT+SKTSTATE command to show the connection id.   |

## 4.5 AT+SKTSEND – Send data

|   |
|---|
| AT+ SKTSEND ==<data_size>,<con_id>[,<dst_ip>,<dst_port>]:<data> |
|---|

|             |  |
|-------------|--|
| Description | This command is used to send data to a specific connection |
|-------------|--|

|              |   |   |
|--------------|---|---|
| Response     | + SKTSEND:OK,<con_id><br>+ SKTSEND:ERROR:<error_no>   |   |
| Paramter     | <data_size>   | Data length   |
|              | <con_id>  | (1~9, con_id 0 is reserved)                               |
|              | [<dst_ip>]  | [optional]xxx.xxx.xxx.xxx (only need for udp server mode) |
|              | [<dst_port>]  | [optional]1~65535 (only need for udp server mode)         |
|              | <data>  | Payload data  |
| Error Number | 1: parameter number error<br>2: <Buffer Size> exceeds ATPT send buffer size<br>3: con_id is not found<br>4: <UDP Client IP> or <UDP Client Port> error for udp server case<br>5: sendto() error for udp server<br>6: sendto() error for udp client<br>7: TCP server should send data to the seed<br>8: write error for tcp client/server  |   |
| Example      | <pre>// query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 con_id:5,client,udp,address:64.233.189.104,port:8080,socket:4 +SKTSTATE:OK  // send data to TCP client(Seed) (con_id 2) AT+ SKTSEND=14,2:Hello Realsil! + SKTSEND:OK,2  // send data to UDP Server via UDP client(con_id 5) AT+ SKTSEND=14,5:Hello Realsil! + SKTSEND:OK,5  // send data to TCP Server via TCP client(con_id 4) AT+ SKTSEND=14,4:Hello Realsil! + SKTSEND:OK,4  // send data to UDP client(ip: 192.168.99.185, port:55339) via UDP Server(con_id 3) AT+ SKTSEND=14,3,192.168.99.185,55339:Hello Realsil! + SKTSEND:OK,3</pre> |   |

|      |  |
|------|--|
| NOTE | <ol style="list-style-type: none"> <li>1. Use the AT+SKTSTATE command to show the connection status.</li> <li>2. The AT+ SKTSEND command can't send data via TCP server created at localhost.</li> <li>3. After delimiter “：“, any input will count</li> </ol> |
|------|--|

## 4.6 AT+SKTREAD – Receive data

| AT+ SKTREAD=<con_id>,<Buffer Size> |  |                             |
|------------------------------------|--|-----------------------------|
| Description                        | This command is used to receive data from a specific connection id, and FW can also be configured to auto receive mode which means any packet received on any connection will return to host automatically(refer to command AT+SKTRECVCFG)   |                             |
| Response                           | + SKTREAD:OK,<data size>,<con_id>[,<dst_ip>,<dst_port>]:<data><br>+ SKTREAD:ERROR:<error_no>   |                             |
| Parameter                          | <con_id>   | (1~9, con_id 0 is reserved) |
|                                    | <Buffer Size>  | Data length                 |
| Error Number                       | 1: command format error<br>2: <Buffer Size> error (should be 1 ~ MAX_BUFFER(default 1600))<br>3: <con_id> is not found<br>4: recvfrom() error for udp server<br>5: recvfrom() error for udp client/seed<br>6: TCP server should receive from seed<br>7: connection lost<br>8: read() error for tcp con_id  |                             |
| Example                            | <pre>// query connection information AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 con_id:5,client,udp,address:64.233.189.104,port:8080,socket:4 +SKTSTATE:OK</pre><br><pre>// receive data “12345678” via TCP seed (con_id 2) AT+ SKTREAD=2,1500 + SKTREAD:OK,8,2:12345678</pre><br><pre>// receive data “12345678” via UDP server(con_id 3) AT+ SKTREAD=3,1500 + SKTREAD:OK,8,3,192.168.99.185,52795:12345678</pre> |                             |

|      |  |
|------|--|
|      | <pre>// receive data "12345678" via TCP client(con_id 4) # AT+ SKTREAD=4,1500 + SKTREAD:OK,8,4:12345678</pre>  |
| NOTE | <ol style="list-style-type: none"> <li>1. Use the AT+ SKTREAD command to receive data from the specific connection id.</li> <li>2. The AT+ SKTREAD command can't receive data via TCP server created at localhost.</li> <li>3. [,&lt;dst_ip&gt;,&lt;dst_port&gt;] will append only if receive data via UDP server created at localhost.</li> </ol> |

## 4.7 AT+SKTRECVCFG – Set auto receive data mode

| AT+SKTRECVCFG =<enable> |  |   |
|-------------------------|--|---|
| Description             | This command is used to set auto receive data mode   |   |
| Response                | +SKTRECVCFG:OK<br>+SKTRECVCFG:ERROR:<error_no>   |   |
| Parameter               | <enable>   | 0 : disable auto receive data mode (default)<br>1 : enable auto receive data mode |
| Error Number            | 1: command parameter error<br>2: start auto receive task fail  |   |
| NOTE                    | Once the auto receive mode is enabled, any packet received on any connection will return to host automatically in the same format as AT+SKTREAD (refer to AT+ SKTREAD, response of command AT+SKTREAD) in normal transmission mode. But if under transparent transmission mode, received data will return to host without any information in the head.<br>Normal mode:<br>+ SKTREAD:OK,8,3,192.168.99.185,52795:12345678<br>TT(transparent transmission) mode:<br>12345678 |   |

## 4.8 AT+SKTSTATE – Check network connection status

| AT+SKTSTATE |   |
|-------------|---|
| Description | This command is used to print network connection status |

|              |  |
|--------------|--|
| Response     | <pre>con_id :&lt;con_id&gt;,&lt;server/seed(TCP client)/client&gt;,\n&lt;tcp/udp&gt;,address:&lt;IP ADDRESS&gt;,port:&lt;PORT&gt;,socket:&lt;socket id&gt;\n...\n+SKTSTATE:OK</pre>  |
| Error Number | NULL   |
| Example      | <p>// If there are some connections.</p> <pre>AT+SKTSTATE\ncon_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0\ncon_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1\ncon_id:3,server,udp,address:192.168.99.143,port:5002,socket:2\ncon_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3\ncon_id:5,client,udp,address:64.233.189.104,port:8080,socket:4\n+SKTSTATE:OK</pre> <p>// If there is not any connection.</p> <pre>AT+SKTSTATE\n+SKTSTATE:OK</pre> |

## 4.9 AT+PING – PING Command

| AT+PING=<xxxx.xxxx.xxxx.xxxx>,[y/loop] |   |  |
|--|---|--|
| Or                                     |   |  |
| AT+PING=<con_id>,[y/loop]              |   |  |
| Description                            | This command is used to PING a specific connection id, or PING a specific network address |  |
| Response                               | <pre>+PING:OK\n+PING:ERROR:&lt;error_no&gt;</pre>   |  |
| Parameter case 1                       | <Remote IP>   | xxx.xxx.xxx.xxx  |
|  | [y/loop]  | No assign: Only five ping requests will be sent.<br>Loop: loop, no count<br>Count: loop with count |
| Parameter case 2                       | <con_id>  | 1~NUM_NS(default 10)   |
|  | [y/loop]  | No assign: Only five ping requests will be sent.<br>Loop: loop, no count<br>Count: loop with count |
| Error Number                           | 1: command format error<br>2: con_id is not found<br>3: partially lost of packets.        |  |

|         |  |
|---------|--|
|         | 4: totally lost of packets.  |
| Example | <pre>// parameter case 1 AT+PING=192.168.1.1      // Only five ping requests will be sent AT+PING=192.168.1.1,loop // loop, no count AT+PING=192.168.1.1,10   // loop 10 times  // parameter case 2 AT+SKTSTATE con_id:1,server,tcp,address:192.168.99.143,port:5001,socket:0 con_id:2,seed,tcp,address:192.168.99.185,port:64089,socket:1 con_id:3,server,udp,address:192.168.99.143,port:5002,socket:2 con_id:4,client,tcp,address:192.168.99.185,port:5001,socket:3 con_id:5,client,udp,address:64.233.189.104,port:8080,socket:4 +SKTSTATE:OK  AT+PING=1 AT+PING=2 AT+PING=3</pre> |
| NOTE    | Use the AT+ SKTREAD command to receive data from the specific connection id.   |

## 4.10 AT+SKTTT – Set transparent transmission mode

| AT+SKTTT=<enable> |   |   |
|-------------------|---|---|
| Description       | This command is used to set transparent transmission(TT) mode   |   |
| Response          | +SKTTT:OK<br>+SKTTT:ERROR:<error_no>  |   |
| Parameter         | <enable>  | 1 : enable TT mode (only “1” is valid by now) |
| Error Number      | 1: command parameter error<br>2: no connection found when try to enter TT mode<br>3: cannot enter TT mode if it's server connection<br>4: more than one connection when try to enter TT mode<br>5: start TT task failed |   |
| Example           | <pre>// For TT(transparent transmission) mode AT+SKTDEL=0 //close all connections +SKTDEL:OK // create TCP client, single connection AT+SKTCLIENT=0,192.168.99.101,5001 +SKTCLIENT:OK</pre>                             |   |

|      |  |
|------|--|
|      | <pre>[AT+SKTCLIENT] con_id=1 AT+SKTTT=1     //enter TT mode     //20ms interval between sending packets     //auto recv mode is also enabled +SKTTT:OK     //enter data transmission mode, any input is treated as data to send,     //besides the uart echo is turned off, which means any input character     //won't have uart echo Hello Realsil! //first packet //(wait for 20ms) Hello Realsil! //second packet (wait for 20ms) ---- //input four hyphens(“-”) to return to command mode # //return to command mode now, auto recv is disabled, uart echo is turned on</pre> |
| NOTE | Once the TT mode is enabled, only one TCP/UDP client connection can be created.  |

## 4.11 AT+SKTAUTOLINK – Save translink and enable autolink

| AT+SKTAUTOLINK=<enable> |  |  |
|-------------------------|--|--|
| Description             | This command is used to save connection information to flash and enable auto connect while booting up                              |  |
| Response                | +SKTAUTOLINK:OK<br>+SKTAUTOLINK:ERROR:<error_no>   |  |
| Parameter               | <enable>   | 0 : erase translink info in flash and disable autolink<br>1 : save translink and enable autolink |
| Error Number            | 1: command parameter error<br>2: parameter number error<br>3: no connection found  |  |
| Example                 | <pre>// close all connections, if there are. AT+SKTDEL=0 +SKTDEL:OK  // connect to AP AT+WLCOMP=iot_test,12345678 +WLCOMP:OK</pre> |  |

|      |   |
|------|---|
|      | <pre>// enable auto connect, this will be store in flash AT+WLAUTOCONN=1 +WLAUTOCONN:OK  // create TCP client, single connection AT+SKTCLIENT=0,192.168.99.101,5001 +SKTCLIENT:OK +SKTCLIENT:con_id=1  // save information into flash AT+SKTAUTOLINK=1 +SKTAUTOLINK:OK  // reboot device AT+RST +RST:OK  AT COMMAND READY  &gt; // start data transmission from here, 20ms between packets ---- // input four hyphens("-") to return to command mode # //return to command mode</pre> |
| NOTE | Device will auto establish connection by using the information stored in flash, and enter data transparent transmission mode.   |

## 4.12 AT+HTTPCLIENT – Send http/https client request

|   |   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
|---|---|------------------|---------------------|--------|--------------------------|--------|-----------------|----------------|--------------------------------|--------|------------------------|--------------|-------------------------------------|----------------|---------------------------|
| AT+HTTPCLIENT=<HTTP:1/HTTPS:2>,<host>,<port>,<GET:2/POST:3>,<path>,<ca:1:N/2:Y>,<content-type>,<data> |   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| Description   | Send http/https post packet.  |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| Response  | +HTTPCLIENT:OK<br>+HTTPCLIENT:ERROR: <error_code>   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| Parameter   | <table border="1"> <tr> <td>&lt;HTTP:1/HTTPS:2&gt;</td><td>1: HTTP<br/>2: HTTPS</td></tr> <tr> <td>&lt;host&gt;</td><td>The host name of server.</td></tr> <tr> <td>&lt;port&gt;</td><td>The port value.</td></tr> <tr> <td>&lt;GET:2/POST:3&gt;</td><td>Http type<br/>2: Get<br/>3: Post</td></tr> <tr> <td>&lt;path&gt;</td><td>A string of path name.</td></tr> <tr> <td>&lt;ca:1:N/2:Y&gt;</td><td>Need SSL verify?<br/>1: No<br/>2: Yes</td></tr> <tr> <td>&lt;content-type&gt;</td><td>A string of http content.</td></tr> </table> | <HTTP:1/HTTPS:2> | 1: HTTP<br>2: HTTPS | <host> | The host name of server. | <port> | The port value. | <GET:2/POST:3> | Http type<br>2: Get<br>3: Post | <path> | A string of path name. | <ca:1:N/2:Y> | Need SSL verify?<br>1: No<br>2: Yes | <content-type> | A string of http content. |
| <HTTP:1/HTTPS:2>  | 1: HTTP<br>2: HTTPS   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <host>  | The host name of server.  |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <port>  | The port value.   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <GET:2/POST:3>  | Http type<br>2: Get<br>3: Post  |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <path>  | A string of path name.  |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <ca:1:N/2:Y>  | Need SSL verify?<br>1: No<br>2: Yes   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |
| <content-type>  | A string of http content.   |                  |                     |        |                          |        |                 |                |                                |        |                        |              |                                     |                |                           |

|              |  |  |
|--------------|--|--|
|              | <data>   | The post data, valid when http type is post. |
| Error number | 1: command format error.<br>2: error to signal http or https.<br>3: invalid port.<br>4: invalid host.<br>5: invalid http type.<br>6: invalid path.<br>7: invalid post content.<br>8: invalid post data.<br>9: failed to set verify for https.<br>10: failed to create http task.<br>11: failed to create https task. |  |
| Example      | AT+HTTPCLIENT=2,httpbin.org,443,3,/post,2,application/json,param1=test_data1&param2=test_data2<br>AT+HTTPCLIENT=1,httpbin.org,80,2,/get?param1=test_data1&param2=test_data2,0,0,0  |  |

## 4.13 AT+SSLCRET – Read or set CA cert/pk key

| AT+SSLCRET=<TYPE>,[<LENGTH>,<CRT>] |  |  |
|------------------------------------|--|--|
| Description                        | Read or set CA cert/pk key   |  |
| Response                           | +SSLCRET:OK<br>+SSLCRET:ERROR: <error_code>  |  |
| Parameter                          | <TYPE>   | 1: client CA.<br>2: private key.<br>3: server root CA.<br>4: public key. |
|                                    | <LENGTH>   | The cert_length.   |
|                                    | <CRT>  | The string of output cert.   |
| Error number                       | 1: There is no parameter.<br>2: There is no cert type.<br>3: Failed when parse one or more PEM certificates from a buffer and add them to the chained list. For client crt,<br>4: Failed when parse one or more PEM certificates from a buffer and add them to the chained list. For CA crt. |  |
| Example                            | AT+SSLCRET=1<br>AT+SSLCRET=1,10,1234567890   |  |

## 5 MQTT command

### 5.1 AT+MQTTOPEN – Create (open) a new mqtt connection

| AT+MQTTOPEN=<conn_id>,<host>,<port> |   |   |
|-------------------------------------|---|---|
| Description                         | Create (open) a new mqtt connection with a conn_id  |   |
| Response                            | OK<br>ERROR <error_number>  |   |
| Parameter                           | conn_id   | 0~3<br>in order to distinguish different connections, there are 4 at most.                      |
|                                     | host  | A string of host name, with 100 bytes at most.  |
|                                     | port  | 1 ~ 65535<br>The port of this connection. It is optional. If absent, the default value is 1883. |
| Error_number                        | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |   |
| Example                             | <pre>// Create a connection with ID 0, without port value. AT+MQTTOPEN=0,adqqqkk.iot.gz.baidubce.com +MQTTOPEN:OK</pre> <pre>// Create a connection with ID 1, port value 1883 AT+MQTTOPEN=1,adqqqkk.iot.gz.baidubce.com,1883 +MQTTOPEN:OK</pre> <pre>// Create a connection with ID 0, which has been created before. AT+MQTTOPEN=0,adqqqkk.iot.gz.baidubce.com</pre>  |   |

|                    |
|--------------------|
| +MQTTOPEN:ERROR: 3 |
|--------------------|

## 5.2 AT+MQTTCLOSE – Delete (close) a connection

| AT+MQTTCLOSE=<conn_id> |   |     |
|------------------------|---|-----|
| Description            | Delete (close) a connection.  |     |
| Response               | OK<br>ERROR <error_number>  |     |
| Parameter              | conn_id   | 0~3 |
| Error_number           | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |     |
| Example                | AT+MQTTCLOSE=0  |     |

## 5.3 AT+MQTTCONN – Connect to the mqtt server

|   |
|---|
| AT+MQTTCONN=<conn_id>,clientid,<the_string_of_clientid> |
| AT+MQTTCONN=<conn_id>,username,<the_string_of_username> |
| AT+MQTTCONN=<conn_id>,password,<the_string_of_password> |
| AT+MQTTCONN=<conn_id>,send                              |

|             |  |
|-------------|--|
| Description | Connect to the mqtt server.<br>The command (AT+MQTTCONN=<conn_id>,"send") should be executed at last. The clientid should be set at first.<br>The connection may be anonymous, so the username and password may be not needed.<br>The result "OK" just means the command is executed successfully. When receiving connection_ack, there will be an "ACK" response. |
|-------------|--|

|              |   |   |
|--------------|---|---|
| Response     | +MQTTCONN:OK<br>ACK<br>+MQTTCONN:ERROR <error_number>   |   |
| Parameter    | conn_id   | 0~3   |
|              | clientid  | These parameters should be inputted with lowercase. |
|              | username  |   |
|              | password  |   |
|              | send  |   |
| Error_number | <the_string_of_clientid>  | The string of clientid, with 100 bytes at most.     |
|              | <the_string_of_username>  | The string of username, with 100 bytes at most.     |
|              | <the_string_of_password>  | The string of password, with 100 bytes at most.     |
| Error_number | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |   |
| Example      | <pre>// Set mqtt server url at first. AT+MQTTCONN=0,clientid,the_string_of_real_clientid +MQTTCONN:OK  // Set the username. If access with anonymous, it can be ignored. AT+MQTTCONN=0,username,the_string_of_real_username +MQTTCONN:OK  // Set the password. If access with anonymous, it can be ignored. AT+MQTTCONN=0,password,the_string_of_real_password +MQTTCONN:OK  // Connect to the server. AT+MQTTCONN=0,send +MQTTCONN:OK ACK</pre>  |   |

## 5.4 AT+MQTTDISCONN – Disconnect from the mqtt server

| AT+MQTTDISCONN=<conn_id> |   |     |
|--------------------------|---|-----|
| Description              | Disconnect from the mqtt server.  |     |
| Response                 | OK<br>ERROR <error_number>  |     |
| Parameter                | conn_id   | 0~3 |
| Error_number             | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |     |
| Example                  | AT+MQTTDISCONN=0<br>+MQTTDISCONN:OK   |     |

## 5.5 AT+MQTTSUB – Subscribe topic

| AT+MQTTSUB=<conn_id>,<topic_string>,<QoS> |   |     |
|---|---|-----|
| Description                               | Subscribe topic.<br>The result “OK” just means the command is executed successfully. When receiving subscribe_ack, there will be an “ACK” response. |     |
| Response                                  | +MQTTSUB:OK<br>ACK<br>+MQTTSUB:ERROR <error_number>   |     |
| Parameter                                 | conn_id   | 0~3 |

|              |   |   |
|--------------|---|---|
|              | topic_string  | The string of subscribed topic, with 100 bytes at most.               |
|              | QoS   | 0~2<br>This parameter is optional, if absent, the default value is 2. |
| Error_number | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |   |
| Example      | // Subscribe the topic without QoS value.<br>AT+MQTTSUB=0,the_string_of_your_topic<br>+MQTTSUB:OK<br>ACK<br>// Subscribe the topic with QoS 0.<br>AT+MQTTSUB=0,the_string_of_your_topic,0<br>+MQTTSUB:OK<br>ACK   |   |

## 5.6 AT+MQTTUNSUB – Unsubscribe topic

| AT+MQTTUNSUB=<conn_id>,<topic_string> |   |     |
|---------------------------------------|---|-----|
| Description                           | Unsubscribe topic.<br>The result “OK” just means the command is executed successfully. When receiving unsubscribe_ack, there will be an “ACK” response. |     |
| Response                              | +MQTTUNSUB:OK<br>ACK<br>+MQTTUNSUB:ERROR <error_number>   |     |
| Parameter                             | conn_id   | 0~3 |

|              |   |   |
|--------------|---|---|
|              | topic_string  | The string of topic to be unsubscribed, with 100 bytes at most. |
| Error_number | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |   |
| Example      | AT+MQTTUNSUB=0,the_string_of_your_topic<br>+MQTTUNSUB:OK<br>ACK   |   |

## 5.7 AT+MQTTPUB – Publish message

```
AT+MQTTPUB=<conn_id>,<message_id>,qos<qos_value>
AT+MQTTPUB=<conn_id>,<message_id>,retain,<retain_value>
AT+MQTTPUB=<conn_id>,<message_id>,topic ,<the_string_of_topic>
AT+MQTTPUB=<conn_id>,<message_id>,message ,<the_string_of_message>
AT+MQTTPUB=<conn_id>,<message_id>,send
```

|             |  |     |
|-------------|--|-----|
| Description | <p>Publish message to the server.<br/> The command<br/> (AT+MQTTPUB=&lt;conn_id&gt;,&lt;message_id&gt;,"send") should be<br/> executed at last. The qos and retain are optional, if absent, the<br/> default value of qos is 2, the default value of retain is 0.<br/> The result "OK" just means the command is executed<br/> successfully. When receiving publish_ack, there will be an<br/> "ACK" response.</p> |     |
| Response    | +MQTTPUB:OK<br>ACK<br>+MQTTPUB:ERROR <error_number>  |     |
| Parameter   | conn_id  | 0~3 |

|              |   |  |
|--------------|---|--|
|              | message_id  | 0~65535  |
|              | qos<br>retain<br>topic<br>message<br>send   | These parameters should be inputted with lowercase.          |
|              | qos_value   | 0~2  |
|              | retain_value  | 0~1  |
|              | the_string_of_topic   | The string of topic, with the length of 100 bytes at most.   |
|              | the_string_of_message   | The string of message, with the length of 100 bytes at most. |
| Error_number | 1: common error.<br>2: input invalid parameter.<br>3: conflict conn_id.<br>4: memory failure.<br>5: has not attached.<br>6: the conn_id has not been created.<br>7: can not connect to the URL.<br>8: can not be authorized.<br>9: rejected by the server.<br>10: the conn_id is not connected.<br>11: the conn_id has been connected.<br>12: publish message failed.<br>13: subscribe topic failed.<br>14: this topic has been subscribed.<br>15: this topic has not been subscribed.<br>16: failed to unsubscribe this topic.<br>17: time out when subscribe or connect.<br>18: failed to create this conn_id task.<br>19: the wifi is not connected. |  |
| Example      | <i>// Set the topic string.</i><br>AT+MQTTPUB=0,1,topic,the_string_of_your_topic<br><i>+MQTTPUB:OK</i><br><i>// Set the message string.</i><br>AT+MQTTPUB=0,1,msg,the_string_of_your_message<br><i>+MQTTPUB:OK</i><br><i>// Set the qos value.</i><br>AT+MQTTPUB=0,1,qos,0<br><i>+MQTTPUB:OK</i><br><i>// Set the retain value.</i><br>AT+MQTTPUB=0,1,retain,0<br><i>+MQTTPUB:OK</i><br><i>// Send publish message.</i><br>AT+MQTTPUB=0,1,send<br><i>+MQTTPUB:OK</i>  |  |

|  |     |
|--|-----|
|  | ACK |
|--|-----|

## 5.8 AT+MQTTCFG – Configure or inquire the parameters

```
AT+MQTTCFG=<conn_id>?
AT+MQTTCFG=<conn_id>,version,<version_value>
AT+MQTTCFG=<conn_id>,keepalive,<keepalive_value>
AT+MQTTCFG=<conn_id>,session,<session_value>
AT+MQTTCFG=<conn_id>,timeout,<timeout_value>
AT+MQTTCFG=<conn_id>,will,<will_value_0>
AT+MQTTCFG=<conn_id>,will,<will_value_1>,<will_value_qos>,<will_retain>,<will_topic>,<will_message>
AT+MQTTCFG=<conn_id>,ssl,<ssl_value>
```

|              |   |  |
|--------------|---|--|
| Description  | Configure or inquire the parameters.<br>The configure will work before creating connection. |  |
| Response     | OK<br>ERROR <error_number>  |  |
| Parameter    | conn_id   | 0~3  |
|              | ?   | If the second parameter is '?', it means inquire command, otherwise, it means configure command. |
|              | version   | The input parameters should be input with lowercase.   |
|              | keepalive   |  |
|              | session   |  |
|              | timeout   |  |
|              | will  |  |
|              | ssl   |  |
|              | version_value   | 3 or 4   |
|              | keepalive_value   | 1~3600   |
| Error_number | session_value   | 0~1  |
|              | timeout_value   | 10000 ~ 60000 (means millisecond)  |
|              | will_value  | 0~1  |
|              | will_qos  | The quality of service setting for the LWT message.  |
|              | will_retain   | The retained flag for the LWT message.   |
|              | will_topic  | The LWT topic to which the LWT message will be published.  |
|              | will_message  | The LWT payload.   |

|         |   |
|---------|---|
|         | <p>5: has not attached.<br/>     6: the conn_id has not been created.<br/>     7: can not connect to the URL.<br/>     8: can not be authorized.<br/>     9: rejected by the server.<br/>     10: the conn_id is not connected.<br/>     11: the conn_id has been connected.<br/>     12: publish message failed.<br/>     13: subscribe topic failed.<br/>     14: this topic has been subscribed.<br/>     15: this topic has not been subscribed.<br/>     16: failed to unsubscribe this topic.<br/>     17: time out when subscribe or connect.<br/>     18: failed to create this conn_id task.<br/>     19: the wifi is not connected.</p> |
| Example | <pre>// Query the current parameters of connect-id 0. AT+MQTTCFG=0,? +MQTTCFG:MQTTVersion 4 +MQTTCFG:keepAliveInterval 60 +MQTTCFG:cleansession 1 +MQTTCFG:command_timeout_ms 60000 (ms) +MQTTCFG:willFlag 0 +MQTTCFG:useSsl 0 +MQTTCFG:OK  // Set the version to 3. AT+MQTTCFG=0,version,3 +MQTTCFG:OK  // Query the current parameters of connect-id 0 again. AT+MQTTCFG=0,? +MQTTCFG:MQTTVersion 3 +MQTTCFG:keepAliveInterval 60 +MQTTCFG:cleansession 1 +MQTTCFG:command_timeout_ms 60000 (ms) +MQTTCFG:willFlag 0 +MQTTCFG:useSsl 0 +MQTTCFG:OK</pre>  |

## 5.9 AT+MQTTRESET – Reset all connections

| AT+MQTTRESET |                            |
|--------------|----------------------------|
| Description  | Reset all connections.     |
| Response     | OK<br>ERROR <error_number> |

|              |                 |
|--------------|-----------------|
| Parameter    | None parameter. |
| Error_number | NULL            |

## 6 BlueTooth command

### 6.1 AT+BLEPMODE – Set the BT peripheral mode

| AT+BLEPMODE=<peripheral_mode> |   |                         |
|-------------------------------|---|-------------------------|
| Description                   | Set the BT peripheral mode.<br>If you want to use this module as BT peripheral, this command should be set to 1 at first.         |                         |
| Response                      | OK<br>ERROR <error_number>  |                         |
| Parameter                     | peripheral_mode   | 0: Disable<br>1: Enable |
| Error_number                  | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                         |
| Example                       | AT+BLEPMODE=0<br>AT+BLEPMODE=1  |                         |

### 6.2 AT+BLECMODE – Set the BT central mode

| AT+BLECMODE=<central_mode> |   |                         |
|----------------------------|---|-------------------------|
| Description                | Set the BT central mode.<br>If you want to use this module as BT central, this command should be set to 1 at first.               |                         |
| Response                   | OK<br>ERROR <error_number>  |                         |
| Parameter                  | central_mode  | 0: Disable<br>1: Enable |
| Error_number               | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                         |
| Example                    | AT+BLECMODE=0<br>AT+BLECMODE=1  |                         |

### 6.3 AT+BLEMAC – Set or get BT MAC address

| AT+BLEMAC=?<br>AT+BLEMAC=<mac> |  |
|--------------------------------|--|
| Description                    | AT+BLEMAC=?<br>AT+BLEMAC=<mac><br>The set command will work after next initialisation. |

|              |   |   |
|--------------|---|---|
| Response     | OK<br>ERROR <error_number>  |   |
| Parameter    | mac   | A hexadecimal string with length of 12 bytes. |
| Error_number | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error.                     |   |
| Example      | AT+BLEMAC=?<br>AT+BLEMAC=2a3f2d10e429   |   |
| NOTE         | The OTP area shall be written while setting the BT MAC address.<br>As the OTP space is limited, please do not modify this MAC value unless necessary. |   |

## 6.4 AT+BLEMTU – Set or get BT GATT MTU size

|                                |   |  |
|--------------------------------|---|--|
| AT+BLEMTU=?<br>AT+BLEMTU=<mtu> |   |  |
| Description                    | AT+BLEMTU=?<br>AT+BLEMTU=<mtu>  |  |
| Response                       | OK<br>ERROR <error_number>  |  |
| Parameter                      | mtu   | The mtu means maximum transfer unit.<br>23 ~ 512 |
| Error_number                   | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |  |
| Example                        | AT+BLEMTU=?<br>AT+BLEMTU=200  |  |

## 6.5 AT+BLEPAIR – Configure authentication information

|   |                                      |
|---|--------------------------------------|
| AT+BLEPAIR=KEY,<conn_id>,<passcode><br>AT+BLEPAIR=SEND,<conn_id><br>AT+BLEPAIR=MODE,<auth_flags>,<io_cap>,<sec_enable>,<oob_enable> |                                      |
| Description   | Configure authentication information |
| Response  | OK                                   |

|              |   |   |
|--------------|---|---|
|              | ERROR <error_number>  |   |
| Parameter    | KEY<br>SEND<br>MODE   | These parameters should be inputted with uppercase. |
|              | conn_id   | 0~2   |
|              | passcode  | 0~999999  |
|              | auth_flags  | A hexadecimal string, such as “0x2A”.               |
|              | io_cap  | 0~255   |
|              | sec_enable  | 0~1   |
|              | oob_enable  | 0~1   |
| Error_number | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |
| Example      | AT+BLEPAIR=SEND,0<br>AT+BLEPAIR=KEY,0,123456<br>AT+BLEPAIR=MODE,0x5,2,1,0   |   |

## 6.6 AT+BLEPASSKEY – Setup or inquire the pairing code

| AT+BLEPASSKEY=?<br>AT+BLEPASSKEY=<passkey> |   |   |
|--|---|---|
| Description                                | Setup or inquire the pairing code   |   |
| Response                                   | OK<br>ERROR <error_number>  |   |
| Parameter                                  | ?   | means inquire the pairing code.         |
|  | passkey   | 000000~999999<br>means the paring code. |
| Error_number                               | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |
| Example                                    | AT+BLEPASSKEY=?<br>AT+BLEPASSKEY=000001   |   |
| NOTE                                       | The passkey must be in 6 digits. If the user need set the value less than 6 digits, please write more 0s padding at left.         |   |

## 6.7 AT+BLEUSERCONF – Send user confirmation

AT+BLEUSERCONF=<conn\_id>,<conf>

|              |   |                       |
|--------------|---|-----------------------|
| Description  | Send user confirmation.   |                       |
| Response     | OK<br>ERROR <error_number>  |                       |
| Parameter    | conn_id   | 0~2                   |
|              | conf  | 0-(Reject),1-(Accept) |
| Error_number | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                       |
| Example      | AT+BLEUSERCONF=0,1  |                       |

## 6.8 AT+BLECONNPARAM – Update connection parameters

| AT+BLECONNPARAM=<conn_id>,<interval_min>,<interval_max>,<latency>,<supervision_timeout> |  |   |
|---|--|---|
| Description   | Update connection parameters.<br>The interval_min, interval_max, latency, supervision_timeout are all string of a hexadecimal value, such as “0x0A20”. |   |
| Response  | OK<br>ERROR <error_number>   |   |
| Parameter   | conn_id  | 0~2   |
|   | interval_min   | 0x0006 ~ 0x0C80<br>(Range is 7.5ms to 4 seconds)                                |
|   | interval_max   | 0x0006 ~ 0x0C80<br>(Range is 7.5ms to 4 seconds)<br>interval_max > interval_min |
|   | latency  | 0x0000 - 0x01F3   |
|   | supervision_timeout  | 0x000A - 0x0C80<br>(Range is 100ms to 32 seconds)                               |
| Error_number  | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error.                      |   |
| Example   | AT+BLECONNPARAM=0,0x30,0x40,0x0,0x1F4  |   |

## 6.9 AT+BLECLRINQ – Clear or inquire the pairing information

| AT+BLECLRINQ=CLEAR<br>AT+BLECLRINQ=INFO |  |
|---|--|
| Description                             | Clear or inquire the paring information. |

|              |   |                                    |
|--------------|---|------------------------------------|
| Response     | OK<br>ERROR <error_number>  |                                    |
| Parameter    | CLEAR   | Clear all the paring informations. |
|              | INFO  | List all the paring informations.  |
| Error_number | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                                    |

## 6.10 AT+BLENANE – Set or inquire the adv name

|                                   |  |   |
|-----------------------------------|--|---|
| AT+BLENANE=?<br>AT+BLENANE=<name> |  |   |
| Description                       | Set or inquire the adv name.   |   |
| Response                          | OK<br>ERROR <error_number>   |   |
| Parameter                         | ?  | Inquire the adv name.   |
|                                   | name   | Set the adv name, it is a string with 22 bytes at most. It will work when the adv is not going. |
| Error_number                      | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error.<br>4: The ble adv is on going, please stop it. |   |

## 6.11 AT+BLEADV – Set or inquire the adv status

|                                   |   |                         |
|-----------------------------------|---|-------------------------|
| AT+BLEADV=?<br>AT+BLEADV=<status> |   |                         |
| Description                       | Set or inquire the adv status.  |                         |
| Response                          | OK<br>ERROR <error_number>  |                         |
| Parameter                         | ?   | Inquire the adv status. |
|                                   | status  | 0~1                     |
| Error_number                      | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                         |

## 6.12 AT+BLEADVINTV – Set or inquire the adv interval

| AT+BLEADVINTV=?<br>AT+BLEADVINTV=<adv_interval_max>,<adv_interval_min> |   |  |
|--|---|--|
| Description  | Set or inquire the adv interval.  |  |
| Response   | OK<br>ERROR <error_number>  |  |
| Parameter  | ?   | Inquire the adv interval.  |
|  | adv_interval_max  | 0x0020 - 0x4000 (20ms - 10240ms, 0.625ms/step)   |
|  | adv_interval_min  | 0x0020 - 0x4000 (20ms - 10240ms, 0.625ms/step)<br>adv_interval_max ><br>adv_interval_min |
| Error_number   | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |  |
| Example  | AT+BLEADVINTV=1600,1600   |  |

## 6.13 AT+BLEINDNTF – Send indication/notification from GATT server

| AT+BLEINDNTF=<conn_id>,<service_id>,<attribute_index>,<type>,<length>,<p_value> |  |   |
|---|--|---|
| Description   | Send indication/notification from GATT server. |   |
| Response  | OK<br>ERROR <error_number>                     |   |
| Parameter   | conn_id  | 0~2   |
|   | service_id                                     | 1.  |
|   | attribute_index                                | 0xa or 0x7  |
|   | type   | 0: any PDU type.<br>1: notification PDU type.<br>2: indication PDU type.  |
|   | length   | 1~23.   |
|   | p_value  | A hexadecimal value stream after the parameter "length", and the number of value is not larger than length. If the number is less than length, the end will be filled with 0xFF as padding. |
| Error_number  | 1: There should be some parameters.            |   |

|         |   |
|---------|---|
|         | 2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error.  |
| Example | AT+BLEINDNTF=0,1,0xa,2,0x1,0x1<br>AT+BLEINDNTF=0,1,0x7,1,0x2,0x1,0x2  |
| NOTE    | Before peripheral sending indication/notification to central, central should enable CCCD at first.<br>For central, execute “AT+BLEWRITE=0,1,0x14,0x02,0x01,0x00” to enable peripheral notification.<br>For peripheral, execute “AT+BLEWRITE=0,1,0x17,0x02,0x02,0x00” to enable peripheral indication. |

## 6.14 AT+BLECONN – Create connection

| AT+BLECONN=P/R,<ble_bd_addr> |   |  |
|------------------------------|---|--|
| Description                  | Create connection.  |  |
| Response                     | OK<br>ERROR <error_number>  |  |
| Parameter                    | P   | public device address type.  |
|                              | R   | random device address type.  |
|                              | ble_bd_addr   | device address, a hexadecimal value string, with length of 12 bytes. |
| Error_number                 | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |  |
| Example                      | AT+BLECONN=P,001122334455   |  |

## 6.15 AT+BLEDISCONN – Close connection

| AT+BLEDISCONN=<conn_id> |   |     |
|-------------------------|---|-----|
| Description             | Close connection.   |     |
| Response                | OK<br>ERROR <error_number>  |     |
| Parameter               | conn_id   | 0~2 |
| Error_number            | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |     |
| Example                 | AT+BLEDISCONN=0   |     |

## 6.16AT+BLECONNINFO – Get all connection information

| AT+BLECONNINFO |   |
|----------------|---|
| Description    | Get all connection information.   |
| Response       | Return the information of all connections, including active link number, active link information, idle link number. |
| Parameter      | NULL  |
| Error_number   | 1: The number of parameters is wrong, or input wrong parameters.<br>2: Command type error.                          |

## 6.17AT+BLESCAN – Scan BLE adv

| AT+BLESCAN=<scan_enable>,<filter_policy>,<filter_duplicate> |   |   |
|---|---|---|
| Description   | Scan BLE adv  |   |
| Response  | OK<br>ERROR <error_number>  |   |
| Parameter   | <scan_enable>   | 0: stop scanning.<br>1: start scanning. |
|   | <filter_policy>   | 0: any.<br>1: whitelist.                |
|   | <filter_duplicate>  | 0: disable.<br>1: enable.               |
| Error_number  | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |
| Example   | AT+BLESCAN=1,0,1<br>AT+BLESCAN=0  |   |

## 6.18AT+BLEREAD – Read characteristic value

| AT+BLEREAD=<conn_id>,<handle>                                       |  |  |
|---|--|--|
| AT+BLEREAD=<conn_id>,<start_handle>,<end_handle>,<uuid_type>,<uuid> |  |  |
| Description   | 1. Read characteristic value.<br>2. Read characteristic value by uuid. |  |
| Response  | OK<br>ERROR <error_number>   |  |
| Parameter   | <conn_id>  | 0~2  |
|   | <handle>   | Request handle, a hexadecimal value in 0x1 ~ 0xFFFF. |

|              |   |   |
|--------------|---|---|
|              | <start_handle>  | Start handle of range to be searched, a hexadecimal value in 0x1 ~ 0xFFFF.  |
|              | <end_handle>  | End handle of range to be searched, a hexadecimal value in 0x1 ~ 0xFFFF.  |
|              | <uuid_type>   | 0~1   |
|              | <uuid>  | A hexadecimal value stream. If uuid_type is 0, it is a hexadecimal value stream with 4 bytes, such as “2A3F”, else, it is a hexadecimal value stream with 32 bytes. |
| Error_number | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |
| Example      | AT+BLEREAD=0,0x1,0xFFFF,0,B001  |   |

## 6.19 AT+BLEWRITE – Write characteristic value

| AT+BLEWRITE=<conn_id>,<type>,<handle>,<length>,<value> |   |   |
|--|---|---|
| Description  | Write characteristic value.   |   |
| Response   | OK<br>ERROR <error_number>  |   |
| Parameter  | <conn_id>   | 0~2   |
|  | <type>  | 0x1: Write request.<br>0x2: Write command.  |
|  | <handle>  | 0x11  |
|  | <length>  | If type is 0x1, range of length is from 0 to 512.<br>If type is 0x2, range of length is from 0 to (mtu_size - 3).   |
|  | <value>   | A hexadecimal value stream after the parameter “length”, and the number of value is not larger than length. If the number is less than length, the end will be filled with 0xFF as padding. |
| Error_number   | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |
| Example  | AT+BLEWRITE=0,1,0x11,0x1,0x02   |   |

|                                    |
|------------------------------------|
| AT+BLEWRITE=0,2,0x11,0x2,0x10,0x20 |
|------------------------------------|

## 6.20 AT+BLEWHITELIST – Modify whitelist

| AT+BLEWHITELIST=0<br>AT+BLEWHITELIST=1,P/R,<addr><br>AT+BLEWHITELIST=2,P/R,<addr> |   |  |
|---|---|--|
| Description   | 1. Clear the stored whitelist.<br>2. Add a new element into whitelist.<br>3. Delete an element from whitelist.                    |  |
| Response  | OK<br>ERROR <error_number>  |  |
| Parameter   | 0   | Clear the stored whitelist.                                  |
|   | 1   | Add a new element into whitelist.                            |
|   | 2   | Delete an element from whitelist.                            |
|   | P   | Public address type.   |
|   | R   | Random address type.   |
|   | <addr>  | Address, a hexadecimal value string with length of 12 bytes. |
| Error_number  | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |  |

## 6.21 AT+BLESCANPARAM – Modify scan interval/window

| AT+BLESCANPARAM=1,<scan_interval><br>AT+BLESCANPARAM=2,<scan_window> |  |   |
|--|--|---|
| Description  | 1. Modify scan interval.<br>2. Modify scan window. |   |
| Response   | OK<br>ERROR <error_number>                         |   |
| Parameter  | 1  | Modify scan interval.                           |
|  | 2  | Modify scan window.                             |
|  | <scan_interval>                                    | 0x0004 - 0x4000 (2.5ms - 10240ms, 0.625ms/step) |
|  | <scan_window>                                      | 0x0004 - 0x4000 (2.5ms - 10240ms, 0.625ms/step) |
| Error_number   | 1: There should be some parameters.                |   |

|         |  |
|---------|--|
|         | 2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |
| Example | AT+BLESCANPARAM=1,0x190<br>AT+BLESCANPARAM=2,0xC8  |

## 6.22 AT+BLEAUTOCONN – BLE auto reconnect

| AT+BLEAUTOCONN=<status><br>AT+BLEAUTOCONN=P/R,<ble_bd_addr> |  |  |
|---|--|--|
| Description   | 1. Enable/Disable BLE auto reconnect.<br>2. Set BLE auto reconnect remote address.   |  |
| Response  | OK<br>ERROR <error_number>   |  |
| Parameter   | <status><br>P<br>R<br><ble_bd_addr>  | 0: Discable.<br>1: Enable.<br>Public address type.<br>Random address type.<br>Auto reconnect address, a hexadecimal value string, with length of 12 bytes. |
| Error_number  | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error.  |  |
| Example   | 1. AT+BLEAUTOCONN=1 //Enable Ble Auto Connect<br>2. AT+BLEAUTOCONN=P/R,BLE_BD_ADDR //Set Ble Auto Connect Remote Mac, start scan the remote adv. When scanning the adv for the specified address, establish a connection.<br>3. When the GATT is connected, please input AT+BLEAUTOCONN=0, to disable Ble Auto Connect function. |  |

## 6.23 AT+BLEIBEACON – Start or stop ibeacon

| AT+BLEIBEACON=<status> |                                     |                         |
|------------------------|-------------------------------------|-------------------------|
| Description            | Start or stop ibeacon               |                         |
| Response               | OK<br>ERROR <error_number>          |                         |
| Parameter              | <status>                            | 0: Disable<br>1: Enable |
| Error_number           | 1: There should be some parameters. |                         |

|         |  |
|---------|--|
|         | 2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |
| Example | AT+BLEIBEACON=0<br>AT+BLEIBEACON=1   |

## 6.24 AT+BLEIBCNDATA – Set or get ibeacon adv data

|  |   |                                      |
|--|---|--------------------------------------|
| AT+BLEIBCNDATA=<companyID>,<major>,<minor>,<power><br>AT+BLEIBCNDATA=? |   |                                      |
| Description  | Set or get ibeacon adv data.  |                                      |
| Response   | OK<br>ERROR <error_number>  |                                      |
| Parameter  | <companyID>   | A hexadecimal value in 0x1 ~ 0xFFFF. |
|  | <major>   | A hexadecimal value in 0x1 ~ 0xFFFF. |
|  | <minor>   | A hexadecimal value in 0x1 ~ 0xFFFF. |
|  | <power>   | A hexadecimal value in 0x1 ~ 0xFF.   |
|  | ?   | Get ibeacon adv data.                |
| Error_number   | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |                                      |

## 6.25 AT+BLEIBCNUUID – Set or get ibeacon uuid

|   |   |   |
|---|---|---|
| AT+BLEIBCNUUID=<uuid><br>AT+BLEIBCNUUID=? |   |   |
| Description                               | Set or get ibeacon uuid.  |   |
| Response                                  | OK<br>ERROR <error_number>  |   |
| Parameter                                 | <uuid>  | A hexadecimal value string with length of 32 bytes. |
|   | ?   | Get ibeacon uuid.                                   |
| Error_number                              | 1: There should be some parameters.<br>2: The number of parameters is wrong, or input wrong parameters.<br>3: Command type error. |   |

## 7 Release History

| Release            | Time       | Notes |
|--------------------|------------|-------|
| The first release. | 2024-01-29 | -     |
|                    |            |       |